



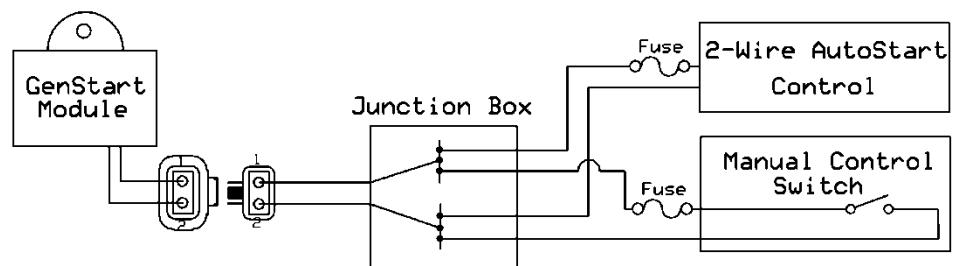

GenStart 6' 2-Wire AutoStart Harness Instructions

GenStart AutoStart harnesses can be used to connect your Standard or Premium GenStart System to multiple remote wired switches and/or any external 2-Wire AutoStart System. Simply connect the AutoStart harness to the GenStart Standard or Premium Start Module. Feed it through the generator battery access door and wire it directly to your switch or AutoStart controller. Remote switches and many other accessories are available on genstart.ca.

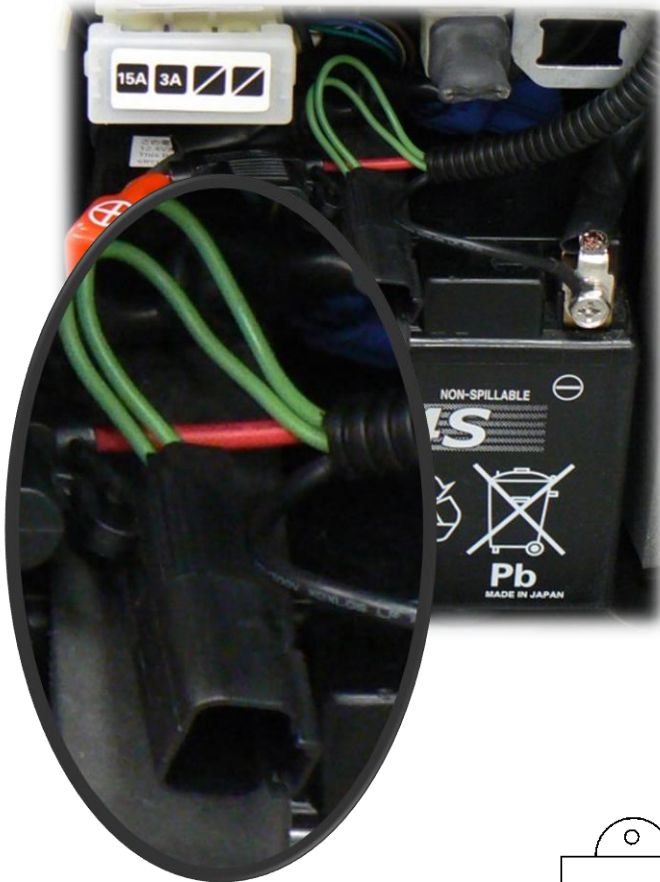

WARNING

The GenStart Start Module internal contacts are rated for 30 amps and are NOT fused. Circuit protection is required. Follow the remote switch or AutoStart Control manufacturer specifications for recommended fuse sizing on control circuits.

GenStart Systems must be installed and interconnected by qualified technicians only.